


# NOVA LUCE


9970100 9970101 9970102  
9970103 9970104 9970200  
9970210 9970220

1

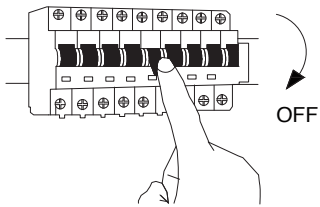


Turn off the general switch

2

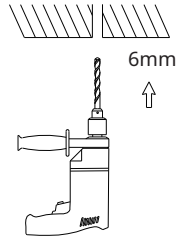


Drill holes

3

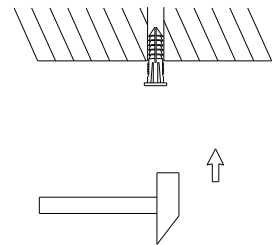


Apply plastic anchors

4

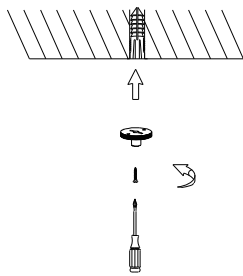


Apply the element with screw

5

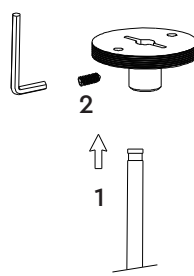


Apply the elements in place

6

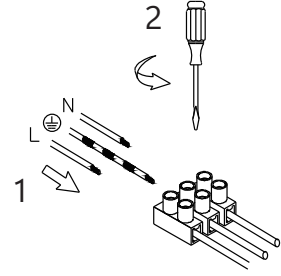


Connect the wires

7

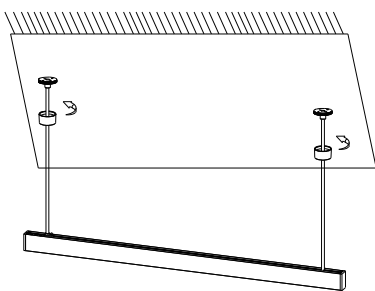


Apply the elements in place

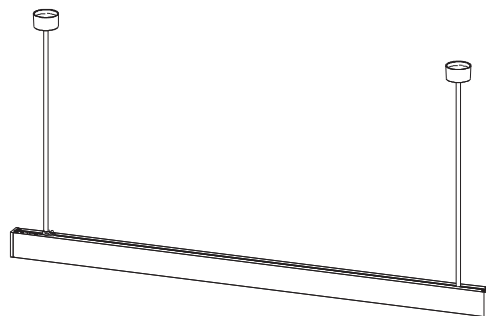


# NOVA LUCE

9080120, 9080130, 9080140  
9080150, 9080160, 9080170  
9970102, 9970103, 9970104  
9970200, 9970210, 9970220

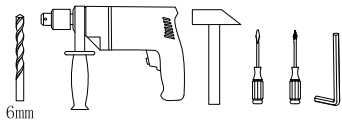


1

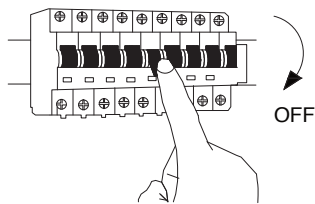


Turn off the general switch

2

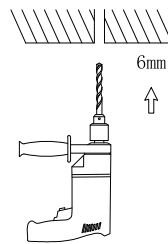


Make holes

3

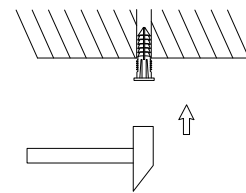


Apply plastic anchors

4

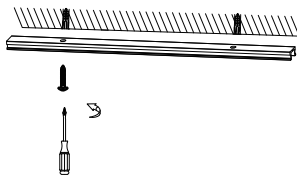


Tie up screws to make it stable

5

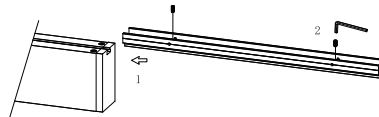


Insert it in place & tie up screws

6

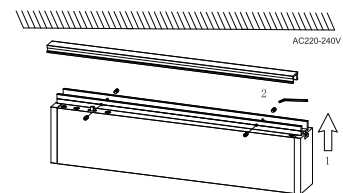

Tie up side screws

7

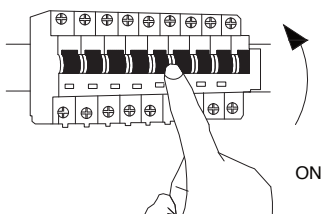

Turn on the general switch

