


NOVA LUCE


9100201, 9100202

1

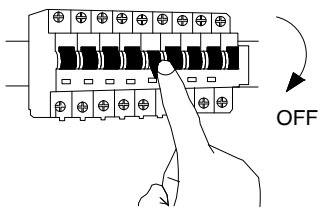


Turn off the general switch

2

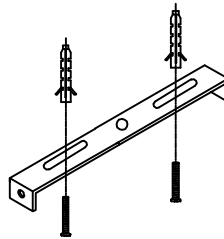


Align, mark and drill holes
apply plastic anchors & tie up screws

3

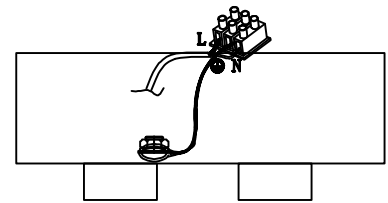


Connect the wires

4

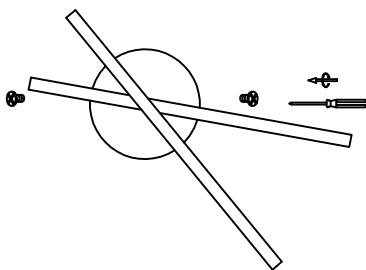

Apply side screws
to make it stable

5

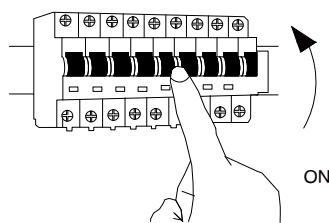

Turn on the general switch

6

